



HAUNCH TOP CONNECTION TO STEEL LANDING

1. SEE S401 FOR TREAD / RISER CONSTRUCTION
2. SEE L100 FOR LANDING CONSTRUCTION