



### HAUNCH BOTTOM CONNECTION TO STEEL LANDING

1. SEE S601 FOR TREAD / RISER CONSTRUCTION
2. SEE L600 FOR LANDING CONSTRUCTION